

READ THIS GUIDE BEFORE STARTING INSTALLATION

Safety Advice

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

WARNING: In order to avoid overheating, do not cover the heater.

The heater must not be located immediately below a socket-outlet.

Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

Always use your appliance with rollers or feet fixed.

Do not use this heater if it has been dropped.

Do not use if there are visible signs of damage to the heater.

Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.

WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

Fixed heaters are to be installed so that switches and other controls cannot be touched by a person in the bath or shower.

 
WARNING: This product shall be installed in the volume 2 only according the national wiring rules.

We suggest that you contact an electrician for assistance.

Installation

Minimum clearances


Dimensions in mm

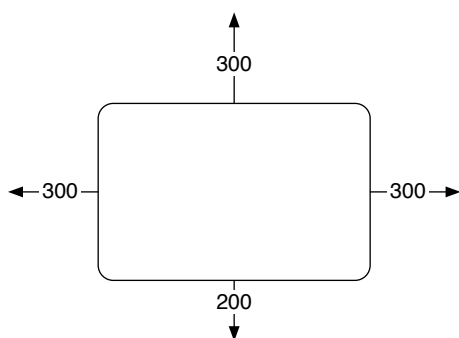


Bracket positioning

Dimensions in mm

 
600W

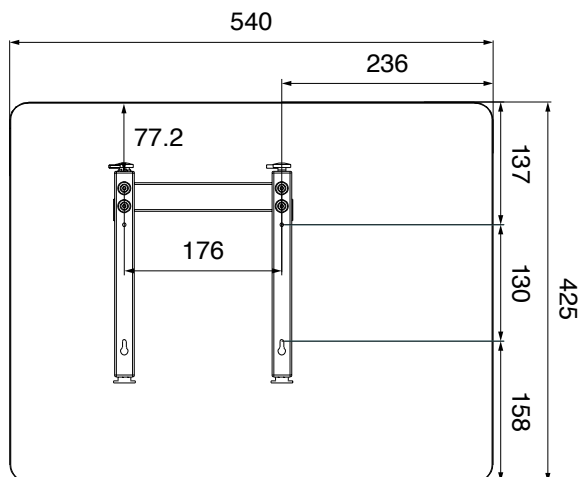


1000W

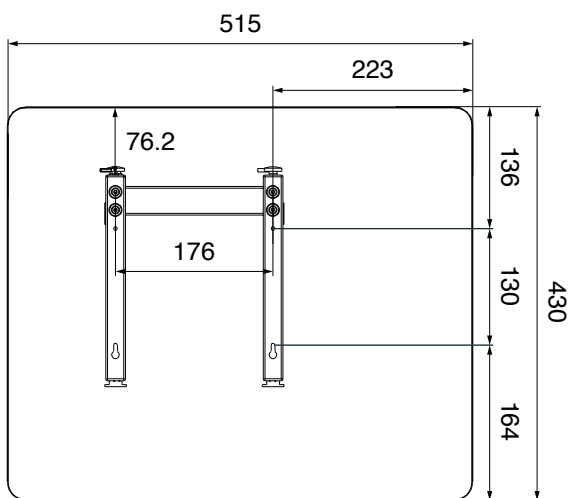 

1500W

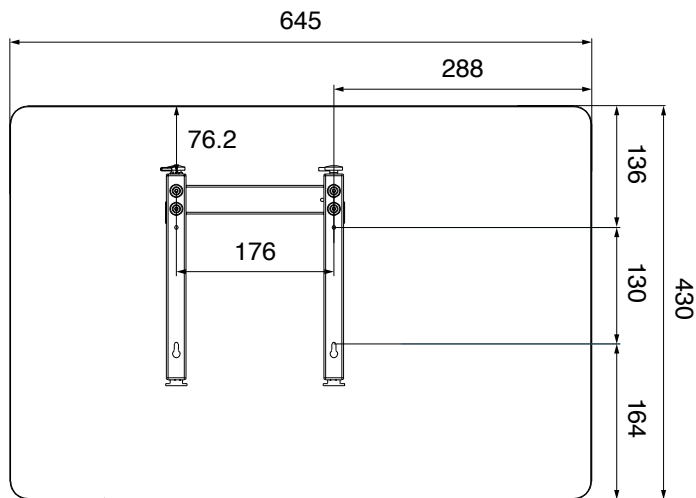 

2000W




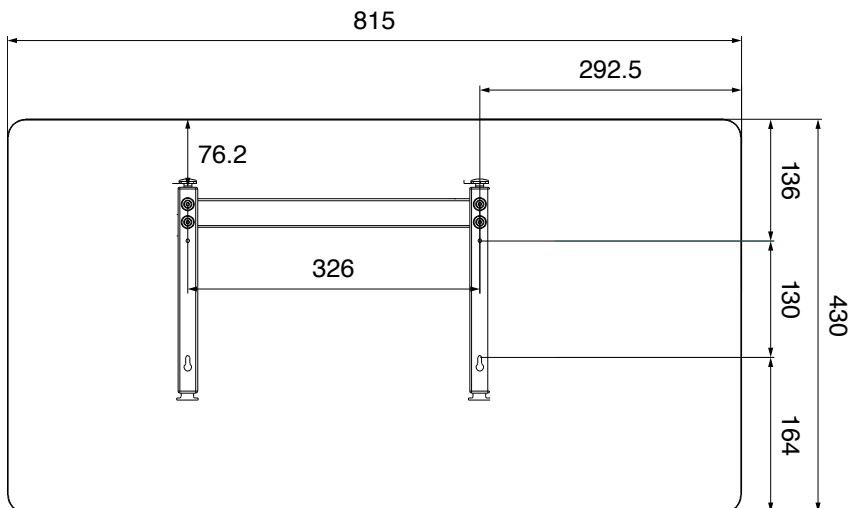 


Installation

Installing the bracket

- A** Put the hanging rack on the wall as a guide ruler (please make sure the holes are at parallel level), use a marker pen to mark the hole position
- B** Drill holes on the wall with Ø8mm drill bit and insert the plastic wall plug
- C** Fasten the hanging rack on the wall with the screws, do make sure the hanging rack is in correct direction
- D** Gently insert the heater body of the bottom to the hanging rack first and then push the heater body to be hooked on the whole hanging rack

    Warning: Before plugging in the unit make sure the radiator is properly attached to the wall. Otherwise problems can occur.

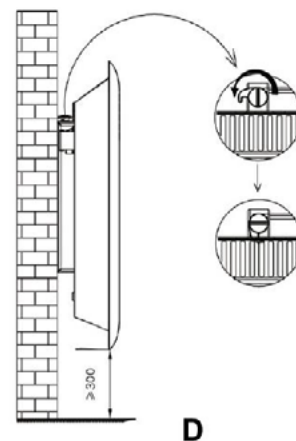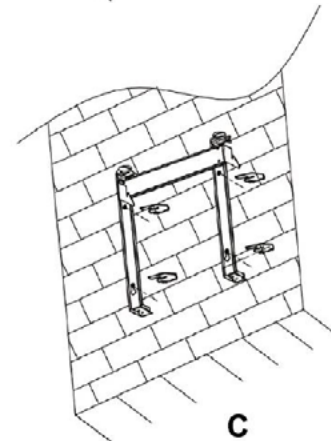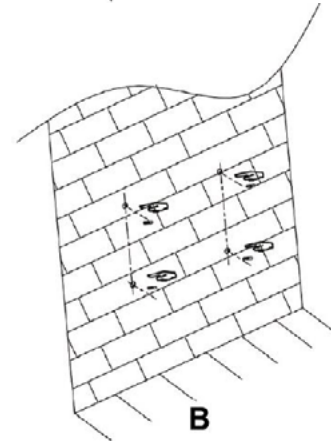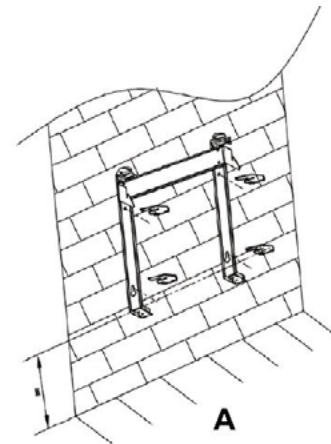

Installation

 
 
Installation must be compliant with the standards and laws in force in the country of installation.

The radiator is in class I and has IP24 electrical protection. In the bathroom, it can be installed in Zone 2 (see figure) only if the control device cannot be touched by people that are using the shower or the bath.




In the bathroom, protect the power line with a high sensitivity 30 mA differential protection device

Install a multipolar switching device. The minimum separation distance between contacts shall be at least 3 mm.

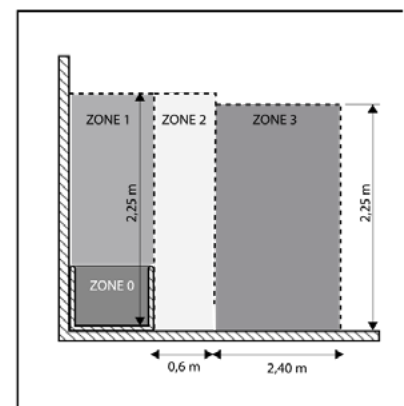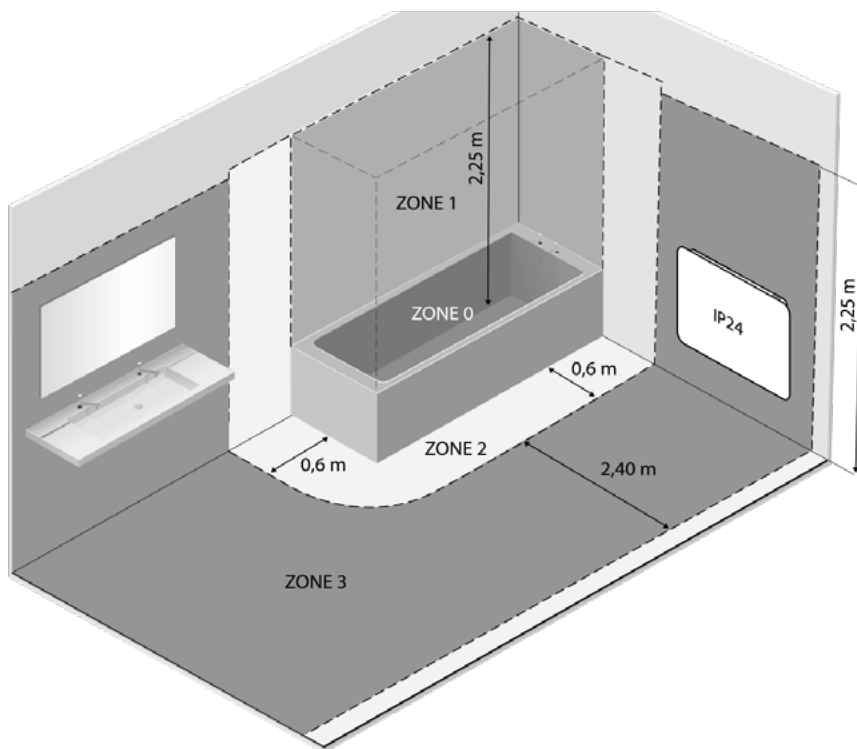

Control panel

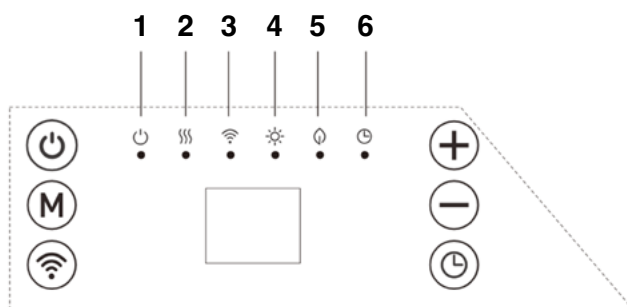 

- | | |
|-------------------|----------------|
| 1 Standby: on/off | 4 Comfort mode |
| 2 Heating status | 5 ECO mode |
| 3 Wifi | 6 Timer |

	Standby
	Mode selection
	WiFi
	Increase function
	Decrease function
	Timer

How to use

Plug the appliance to AC 230-240V 50-60Hz socket, and press down on/off switch with a beep sound. The indicator light is on.

Press to turn on the heater

To stop the heater working, press to turn off the heater,

Unplug the product when it's not in use.

Clock and day of week setting

Press down 3 secs to enter clock and day of week setting

The screen will display "d", press and to select the day from 1-7.

- 1 Monday
- 2 Tuesday
- 3 Wednesday
- 4 Thursday
- 5 Friday
- 6 Saturday
- 7 Sunday

Press to confirm day setting and enter the clock hour setting, the screen will display:

Press and to set the current hour.

Press to confirm hour setting and enter the minute setting, the screen will display:

Press and to set the current minute

Press to confirm all settings

Note: The clock and calendar will be reset to factory default if without power supply.

Heating mode

Press to enter mode selection. By pressing , heating mode runs in a continuous cycle as below:



Comfort mode: Press and to set the temperature from 5-35°C.

ECO mode: Press and to set the temperature from 1-31°C.

Note: ECO mode = Comfort mode - 4°C

Anti-frost mode: the screen will display . The target temperature is 7°C. The temperature can't be adjusted.

P1/P2/P3: Pre-set heating program.

Note: Before entering the P1/P2/P3 program settings for the first time, please ensure that the clock and day settings are completed in advance.

P1: (Monday-Sunday) Unadjustable program



P2: (Monday-Friday) Unadjustable program



P2: (Saturday-Sunday) Unadjustable program



P3: (Monday-Friday)

Adjustable program



P3: (Saturday-Sunday)

Adjustable program



P3 adjustable program setting

1. When under P3 mode, press **(M)** over 3 secs to enter day setting.
2. The screen displays **d1**, press **(+)** and **(-)** to set from (Monday-Sunday). Press **(M)** to confirm and enter hour setting
3. The screen displays **00**, press **(+)** and **(-)** to set from 00-23). Press **(M)** to choose heating mode for every hour (-: Comfort mode or **(Q)** ECO mode or No. 2 lights for Anti-frost mode)
4. Repeat the operation until you have completed the schedule of every hour and every day.

Note: After setting heating mode for hour 23, press **(M)** to return to day setting.

Note: When screen displays **d1**, press **(+)** to finish all setting with display of **P3**.

Timer off function

Press **(C)** one time, the screen display "0H" and keep flashing. Press **(+)** and **(-)** to set timer from 0-24 hours. Press **(C)** again to confirm setting. Then the indicator light is on. The heater will turn off after set time has passed.

Open window function

When the product is in status of stand-by, long press **(M)** when the screen display **00** or **0F**, press **(+)** or **(-)** to set the open window function on or off.

When the heater is working, if the temperature of environment decrease 2 degrees within 2 minutes, the open window function will be activated, the heater will stop working. The screen will display **E3**.

Press **(M)** to continue heating.

Wifi connection

Press **(W)** more than 3 seconds, the logo **(W)** will indicate, open the mobile app and follow the instruction to connect to the unit.

Cleaning & maintenance

Switch off and unplug from the power supply before cleaning.

Using a soft, moist cloth, with or without a mild soap solution, carefully clean the exterior surface of the product.

CAUTION: Allow the product to completely cool before handling or cleaning it.

Do not allow water or other liquids to run into the interior of the product, as this could create a fire and/or electrical hazard.

We also recommend the periodic cleaning of this appliance by lightly running a vacuum cleaner nozzle over the guards to remove any dust or dirt that may have accumulated inside or on the unit.

CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the plastic components.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Smart Life App

 
User Guide



Download the Smart Life - Smart Living app from your device's app store, and create an account or log in.

Ensure the Solene is turned on before proceeding.

Enter pairing mode

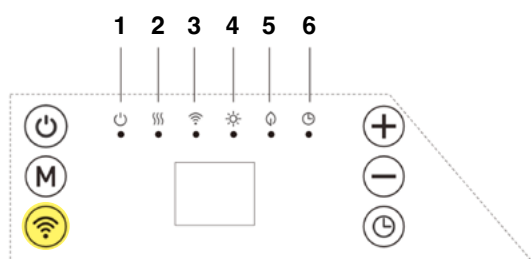


	Standby
	Mode selection
	WiFi
	Increase function
	Decrease function
	Timer


On the Solene control panel - hold the WiFi button (highlighted), for 3 seconds, until the indicator light blinks rapidly. The unit is now in pairing mode.

- | | |
|-------------------|----------------|
| 1 Standby: on/off | 4 Comfort mode |
| 2 Heating status | 5 ECO mode |
| 3 Wifi | 6 Timer |

 
Add device

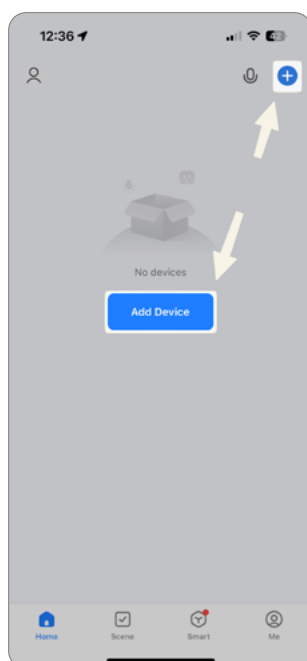

 
Click on either blue button highlighted to add a new device.

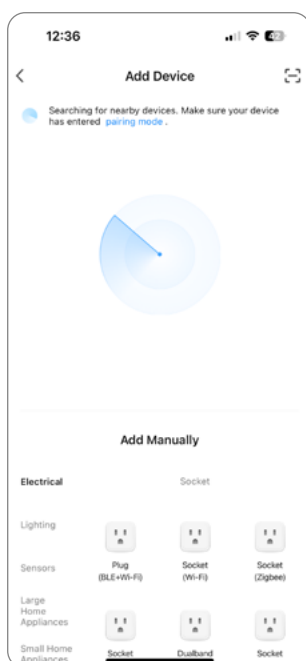

 If the device is not already in pairing mode, do this now (see above).

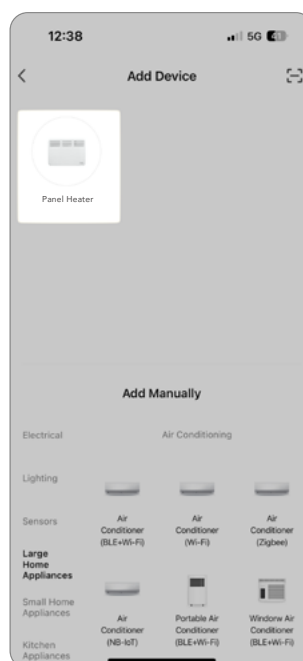

 The unit should appear in the devices list - click to continue.

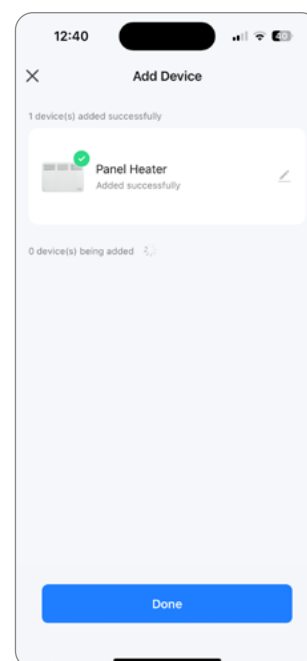

Click 'Done' when the unit has been added.

Smart Life App

 
User Guide



Controls




Power button:
Turn unit on/off

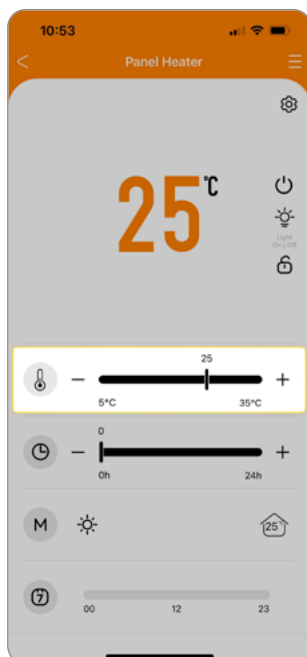

Change temperature:
Use the buttons to increase or decrease the panel heater temperature



 Change mode:
Use this button to change the heating mode of the unit.

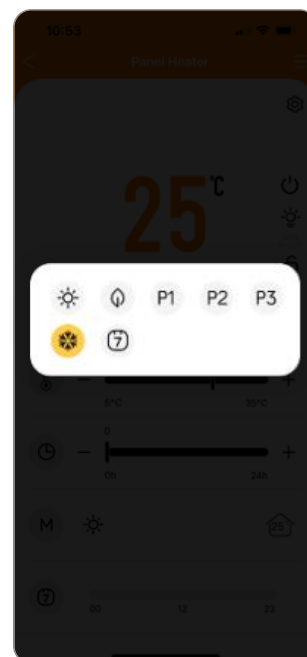

Comfort Mode: Select a required temperature for the heater using the slider or '+' & '-' buttons ranging from 5-35°C. Select and press in the grey area to return to the controls.

ECO Mode: Select and press in the grey area to return to the controls. Select a required temperature for the heater using the slider or '+' & '-' buttons ranging from 1-31°C.

Anti-Frost mode: Select and press in the grey area to return to the controls. A pre-set temperature of 7°C is set and cannot be adjusted.

7 Day Programme: Select and press in the grey area to return to the controls. This allows the user to set different heat patterns throughout the day, 7 days a week. Press the bar next to the calendar icon, choose a time/day and select a required temperature for the heater using the slider. A total of 24 hours & 7 days available to set for different temperatures.



Smart Life App

User Guide



Additional features



Open window function:

When the heater is working, if the temperature of environment decrease 2 degrees within 2 minutes, the open window function will be activated, the heater will stop working. The screen will display **E3**.

 
Press **(M)** on the unit to continue heating.

To disable this function, press the menu button on the top right and slide the function off.




Set temperature:

The temperature that the panel heater is set to will show in this icon.

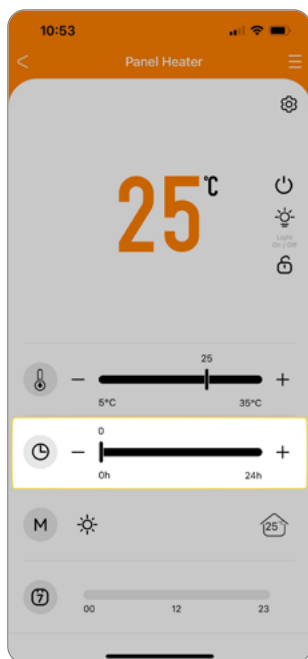

Lights:

 Click to dim the control panel lights on the unit.

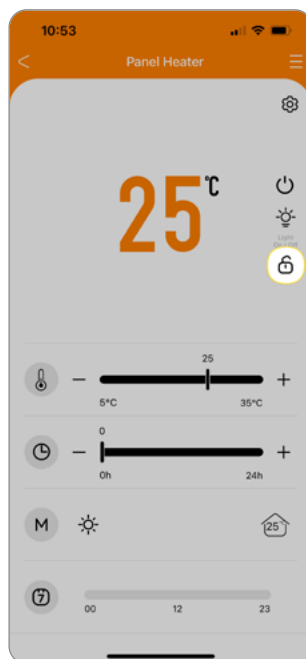

To quickly set a time for the unit to turn on, use the highlighted slider to choose a time.

Lock:

Click to lock the control panel on the unit, so no settings can be adjusted. Unlock to allow changes.