 


Technical Details

 
Radius Corner TRV Valve



THERMOSTATIC VALVE

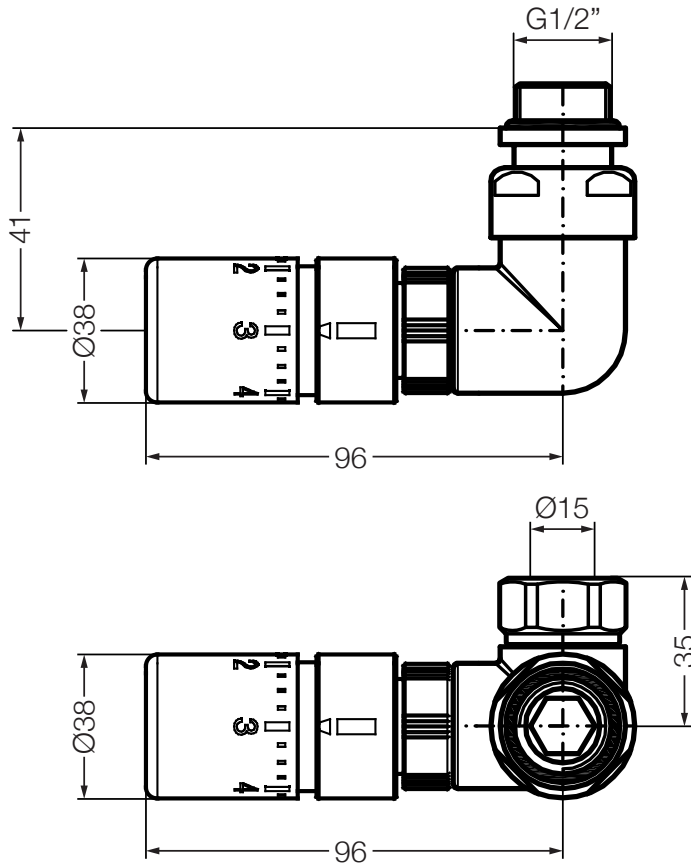

LOCKSHIELD

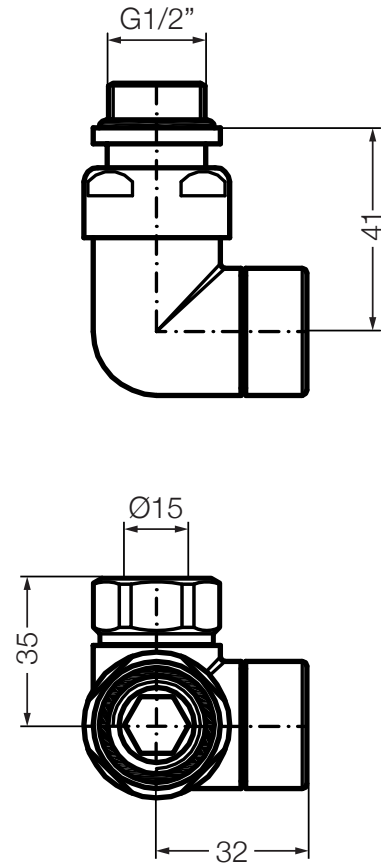

All dimensions are in millimetres & dual dimensions are in inches.

 
Important note: The Radius TRV valve is not bi-directional. We recommend installing the thermostatic valve body to the flow pipework to avoid noisy operation.

Technical features

- Suitable for a 15mm copper pipe
- Maximum working pressure: 10 bar
- Maximum temperature: 100°C
- Body construction: Brass




Installation of TRV head

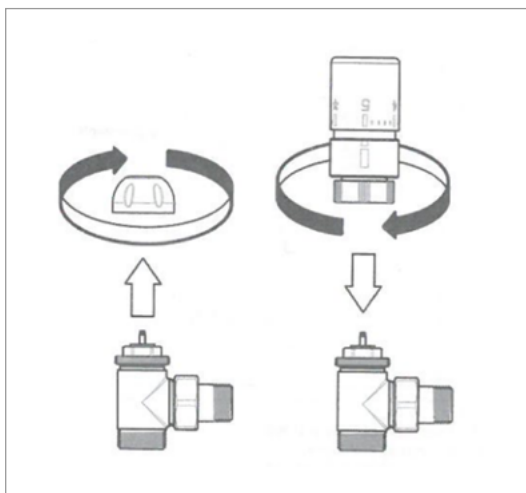


1. Remove the manual adjustment cover
2. Position the TRV head setting on 5
3. Fit the TRV head to the valve body, screwing down the manual ring (Note: pressure may need to be applied to the top of the TRV head when screwing down the manual ring)

 TRV head operating features

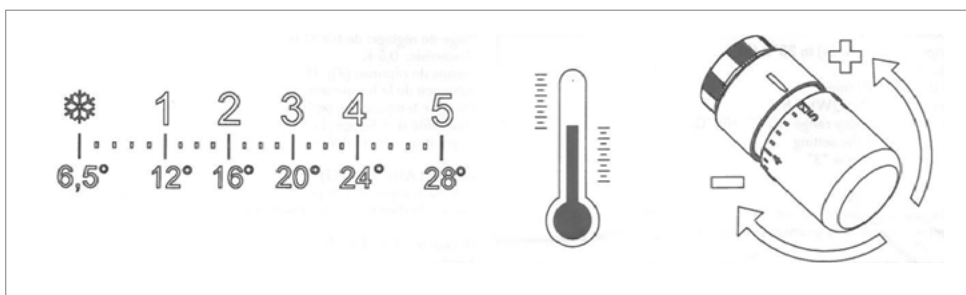

- Setting range: from 6.5°C (❄️) to 28°C (5)
- Response time: 10 minutes
- Intermediate setting is '3'

 Locking the setting

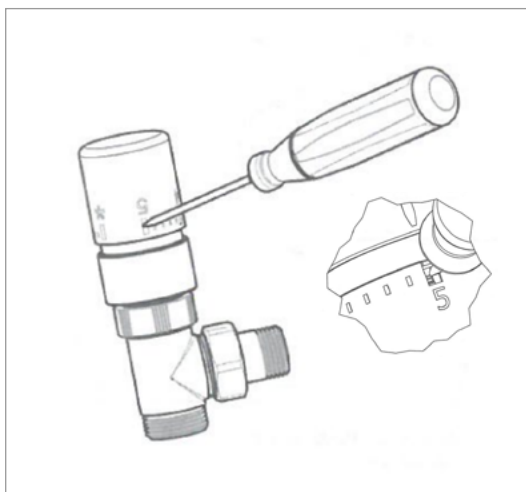

1. Set the TRV head in the required position
2. Insert a little screwdriver in the hole under the n°5, hooking the lock element visible inside and push it down completely (to make this possible, it may be necessary to turn the TRV head back and forth around the chosen position).



Unit 4 Genesis, Endeavour Drive, Basildon, Essex SS14 3WF
Tel: +44 (0) 345 521 5666 Fax: +44 (0)1268 888260
mhs@modularhg.co.uk orders@modularhg.co.uk
aftersales@modularhg.co.uk www.mhsradiators.co.uk

SALES OFFICE - +44 (0)1268 546789

AFTER SALES SUPPORT - +44 (0)1268 546775

