 


Technical Details

 
Thermostyle Corner TRV Valve



THERMOSTATIC VALVE

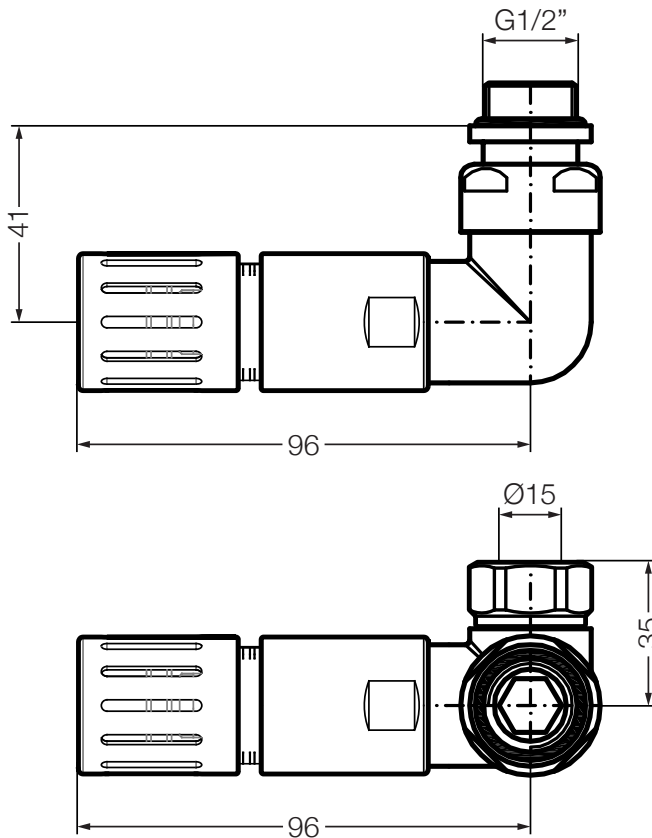

LOCKSHIELD

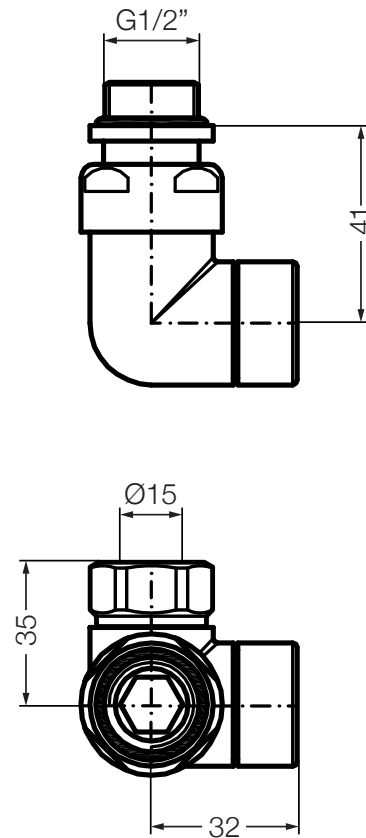

All dimensions are in millimetres & dual dimensions are in inches.

 
Important note: The Thermostyle TRV valve is not bi-directional. We recommend installing the thermostatic valve body to the flow pipework to avoid noisy operation.

Technical features

- Suitable for a 15mm copper pipe
- Maximum working pressure: 10 bar
- Maximum temperature: 100°C
- Body construction: Brass




Installation of TRV head

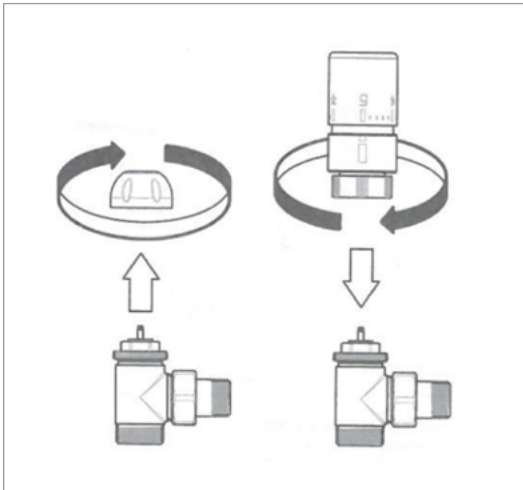

1. Remove the manual adjustment cover
2. Position the TRV head setting on 4
3. Fit the TRV head to the valve body, screwing down the manual ring (Note: pressure may need to be applied to the top of the TRV head when screwing down the manual ring)

 TRV head operating features

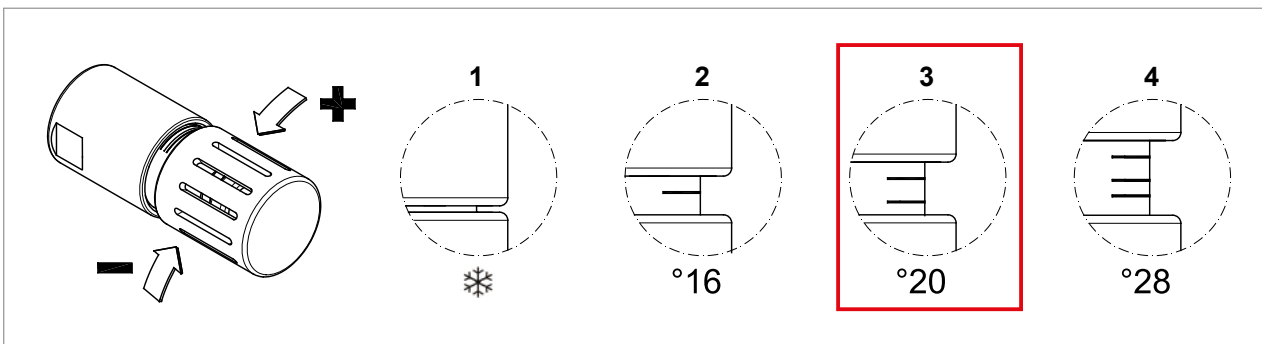

- Setting range: from 6.5°C (❄️) to 28°C (4)
- Response time: 10 minutes
- Intermediate setting is '3'



Unit 4 Genesis, Endeavour Drive, Basildon, Essex SS14 3WF
Tel: +44 (0) 345 521 5666 Fax: +44 (0)1268 888260
mhs@modularhg.co.uk orders@modularhg.co.uk
aftersales@modularhg.co.uk www.mhsradiators.co.uk



SALES OFFICE - +44 (0)1268 546789 AFTER SALES SUPPORT - +44 (0)1268 546775